



# HELPFUL HINTS ON FITTING YOUR LIFT PUMP

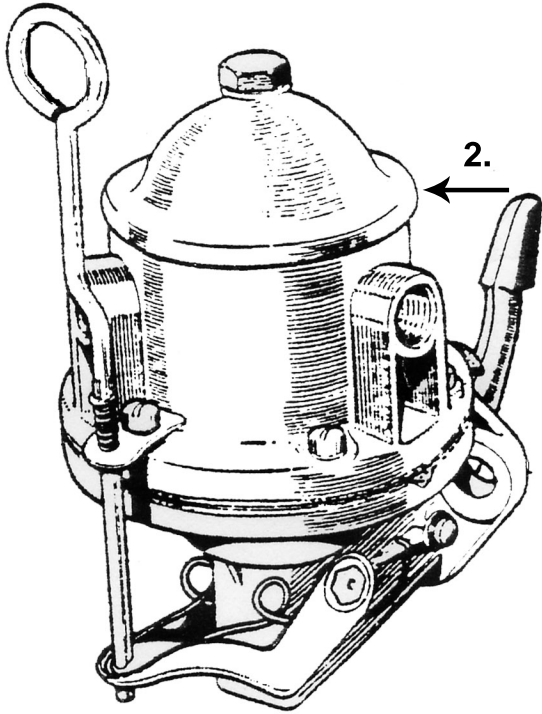

1. The Operating Arm must be ON TOP of the cam and not hooked behind it.

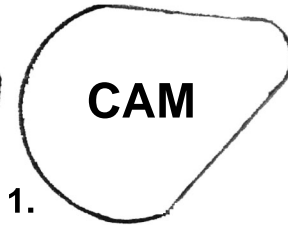

2. The Operating Arm needs to be pushed inwards in order to work.


3. To check you have fitted the lift pump correctly, turn over the Engine by hand to see if it pumps.

**A.S.A.P. SUPPLIES LTD**




Doc. No.-ASAP48-0014GB-0606

# HELPFUL HINTS ON FITTING YOUR LIFT PUMP

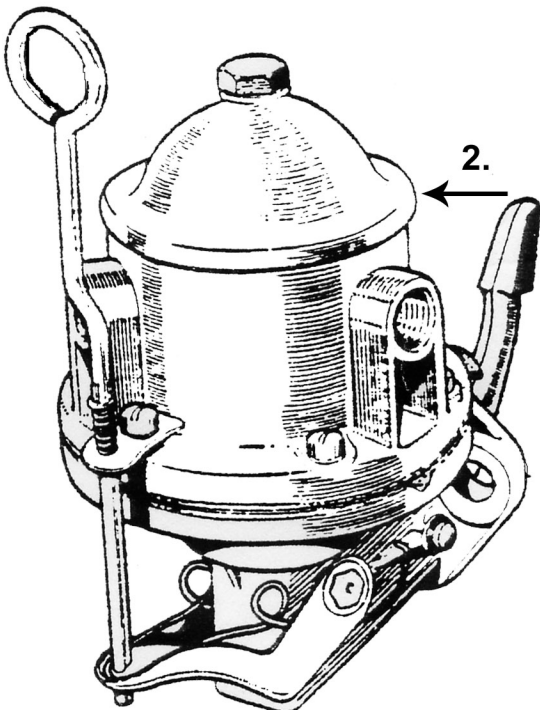

1. The Operating Arm must be ON TOP of the cam and not hooked behind it.

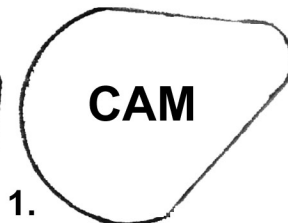

2. The Operating Arm needs to be pushed inwards in order to work.

3. To check you have fitted the lift pump correctly, turn over the Engine by hand to see if it pumps.

**A.S.A.P. SUPPLIES LTD**



Doc. No.-ASAP48-0014GB-0606