





# LECTROTAB

## Installing Lectrotab Wireless (WTR) Control

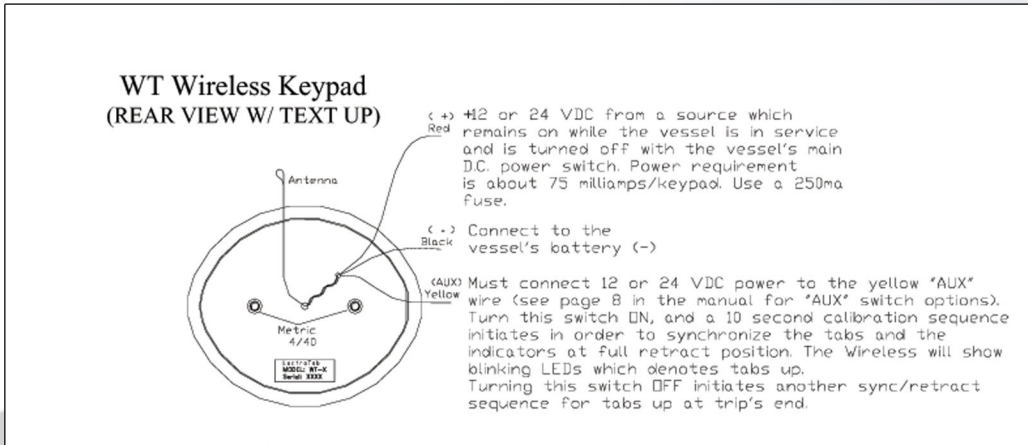

Fully extend antenna vertically and secure with a screw through the loop. Do not shorten antenna length.

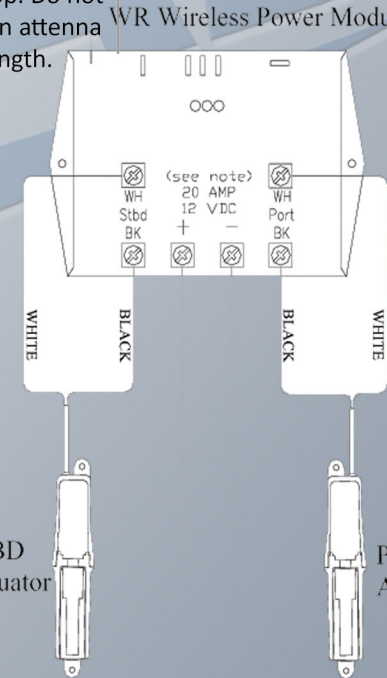


**Note:**

**Wireless Control Models:**

- WTR-111 = Single Station 12vdc with 1 Keypad and 1 Power Module
- WTR-121 = Dual Station 12vdc with 2 Keypads and 1 Power Module
- WTR-211 = Single Station 24vdc with 1 Keypad and 1 Power Module
- WTR-221 = Dual Station 24vdc with 2 Keypads and 1 Power Module

Lectrotab  
Single Station Wireless Control  
Installation Wiring Diagram  
6-17-09

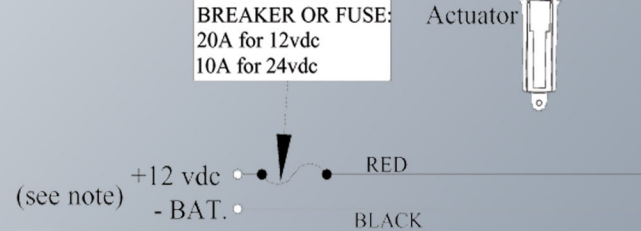

**A.S.A.P. SUPPLIES LTD**

Reed House, Ellough Industrial Estate, Beccles, Suffolk NR34 7TD  
Tel: 0845 1300 870 or 01502 716 993 Fax: 0800 316 2727 or 01502 711 680  
www.asap-supplies.com sales@asap-supplies.com